





Setup Video 8 How to use Party Mode


- PARTY MODE**





Party Mode is a handy feature of the JG Aura heating system.


- It allows the user to temporarily override the current program settings to run at the **SUNNY LEVEL** temperature for a timed period.


The user can set **PARTY MODE** to run from any time between 10 minutes to 99 hours.





- To set Party Mode firstly wake up the stat by tapping any button.


- Press **<** or **>** to select the **PARTY MODE** icon.




The clock will now be replaced with the Party Mode Timer.


- When **PARTY MODE** is selected the **SUNNY LEVEL** icon will also be highlighted.


- Press **^** or **v** to set the duration of **PARTY MODE**.

Then press **✓**.

Here the user has set Party Mode to last for 3 hours and 30 minutes.





**Setup Video 8
How to use Party Mode**

7

The timer will proceed to count down to show the remaining time of the mode setting.



8

When Party Mode has timed out the system will automatically revert back to it's original program setting for that time of day.

As shown on this display the user has set Party Mode to finish at 23:00.



9

AUTO MODE is now active with the low heat setting (MOON LEVEL) applied.



10

Whilst Party Mode is running, the remaining time can be adjusted.

Press or until the desired time is showing



11

Then press



12

To end Party Mode before the timer reaches zero, simply

Press to select the AUTO MODE icon. This will put the system back to it's original program settings.

